


Latest Track Tweaks—Stiffen centre section, Spring pans

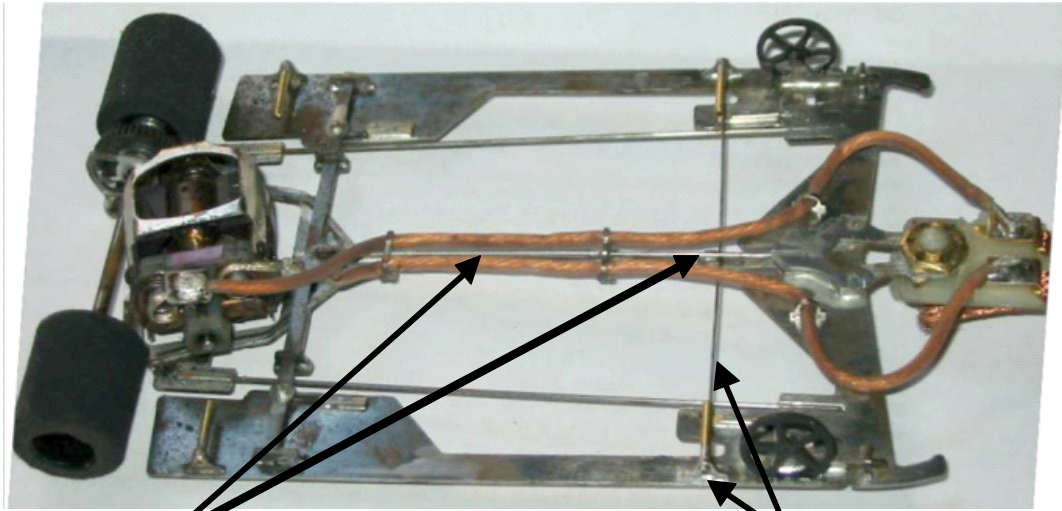

Use an 0.032 wire as instructed, but add stainless pin tube over the wire between the front and rear leadwire holder and also the front lead wire holder and guide plate. Solder these to lead wire holders and rear of guide plate.

Cut slots in the underside of both front pin tube mounts so you can slide a piece of 0.015" piano wire under the centre section wire and into the mounts above the pan and below the pin tube. Solder wire to pin tube mounts & tag wire to centre section to "spring pans" lightly in forward position.